




# Picket Play Fencing Contents

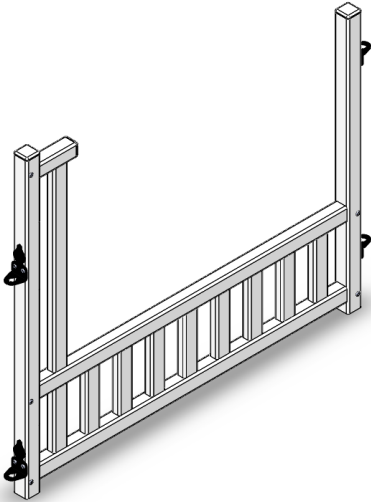


Step Panel (Qty: 1)

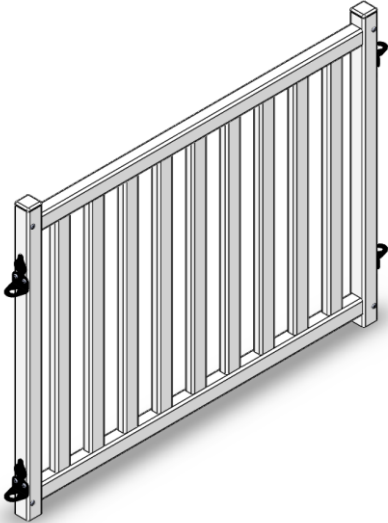


Door Panel – 28” tall (Qty: 1)

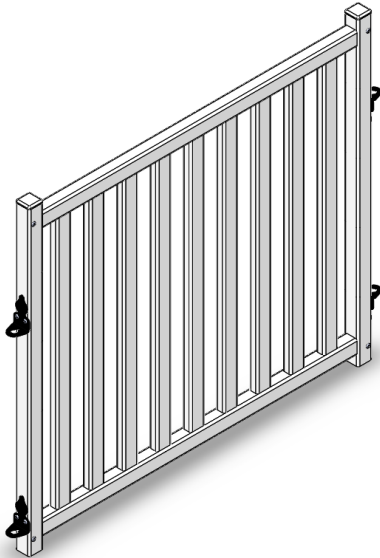


Standard Panel – 32” tall (Qty: 12)

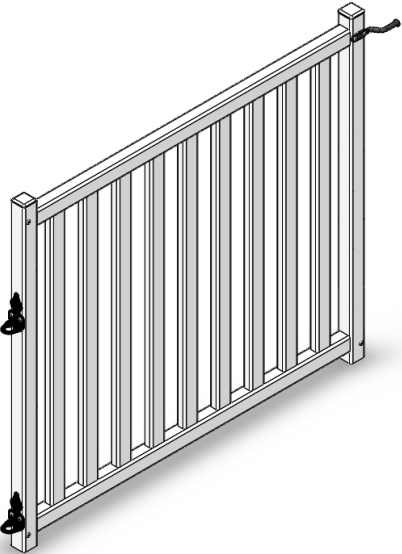

Gate Panel with latch pin (Qty: 1)

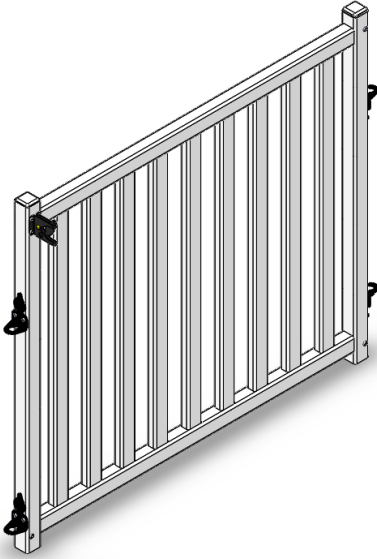

Gate Panel with latch (Qty: 1)

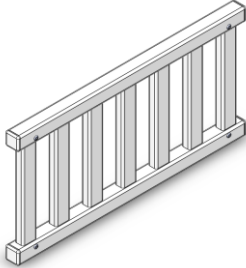

Insert Panel (Qty: 1)



Short Rod (Qty: 10)





Long Rod (Qty: 7)

**Step 1:** Place step panel under steps with 28" post side (shorter side) on the side that the door swings open.

**Step 2:** Attach shorter door panel to the short side of the step panel by placing a short rod through the brackets of each panel. (This allows the door to open completely without contacting the fence.)



**Step 3:** Attach standard 32" panel to the tall side of the step panel by placing a long rod through the overlapping eyelets. (Long rods go into the ground to make fence more secure.)

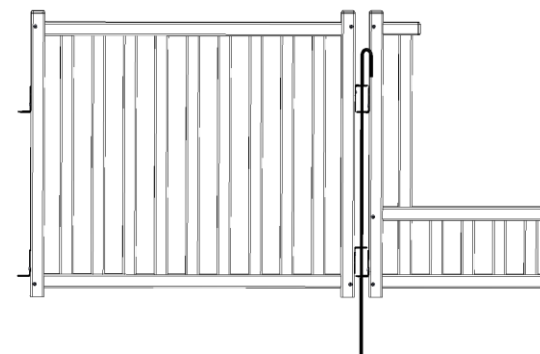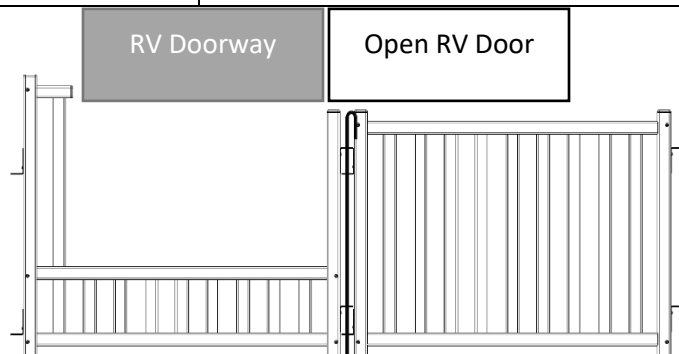

**Step 4:** If desired, place insert panel in between the steps, as shown in the picture below. This piece can rest inside the steps, additional means of securing this piece is optional.


**Step 5:** Continue attaching standard 32" panels to cover your desired area. Note: Use long rods to connect panels that will make a corner and the gate.

**Step 6:** Use a long rod to attach the latch pin gate panel to a standard 32" panel at your desired placement. Use latch gate panel with a long rod to continue the assembly until the area is completely enclosed.

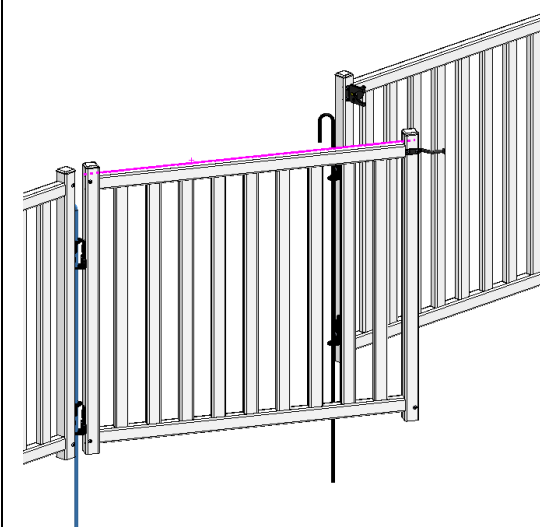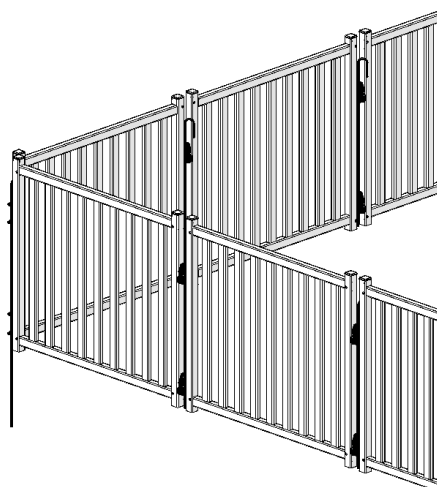

If assembled correctly:

- The Picket Play gate will open inward if your RV door opens to the right (As shown below).
- The Picket Play gate will open outward if your RV door opens to the left.

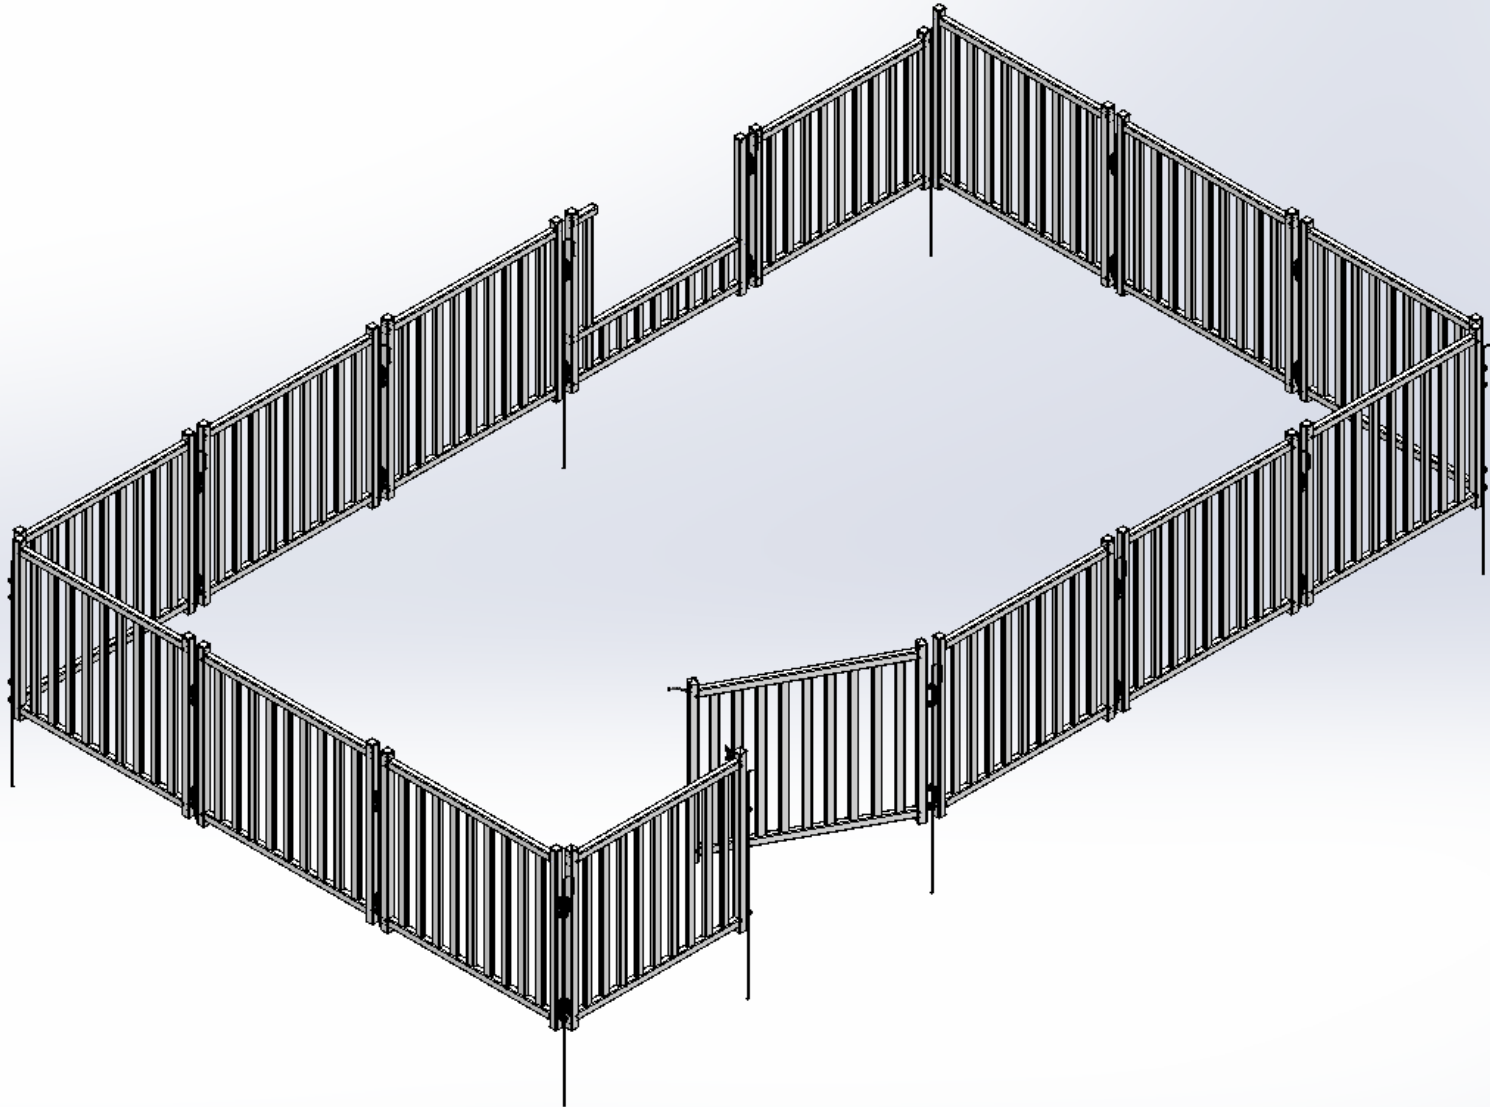

*From the Safety Step Family to yours, we hope you enjoy your Picket Play experience!*